

Replacement and Programming Instructions

Transmitters: Compatibility and Replacement

| | | Replaceme | nt Product | | Discontinu | ed Products |
|-------------|------------|------------|--|------------------------|------------|--|
| | RADIOEM903 | Moccases . | | RADIO022 (MT3-1000) | There | 3-Button Transmitter. Operates 3 doors. Open / Close function. 9V battery. Sun-visor clip. |
| Transmitter | | | 3-Button Transmitter. Operates up to 3 doors. Open / Close function. LED indicator. 3V battery. Sun-visor clip. | RADIO016 (MT2-1000) | Tanks | 2-Button Transmitter. Operates 2 doors. Open / Close function. 9V battery. Sun-visor clip. |
| | | | | RADIO027 (MT-1000) | Marco | 1-Button Transmitter. Operates 1 door. Open / Close function. 9V battery. Sun-visor clip. |



Programming Instructions

> RADIOEM903 Transmitter Initial Configuration: Use it to Control 1, 2 or 3 Doors.

- Press and HOLD Buttons ① and ③ simultaneously for 5 sec. The RED LED will BLINK. You have 15 sec. to complete the configuration or you will need to restart.
- 2. Release **Buttons** ① and ③.
- 3. Press **Button** ① or ② or ③ in order to configure the transmitter to the appropriate number of doors to be controlled by this transmitter, ie: ① for 1-Door, ② for 2-Doors, ③ for 3-Doors.
- 4. The **RED LED** will stop \mathcal{T} blinking. Programming is now complete.
- 5. The remaining buttons will be deactivated.

Note: Initial configuration can be repeated as needed (repeat steps 1-5 above).



> Replacing RADIO022 (3-Door Transmitter) with new RADIOEM903 (3-Door Transmitter):

The DIP SWITCH transmitter has 10 switching keys. With the use of a screwdriver or a pen, place the dip switch keys on RADIOEM903 at the same positions as those found on RADIO022.



Replacement and Programming Instructions

Coding the Receiver (as reference):

- → Dip Switch Keys #1 to #7 = must be at the same ON / OFF positions as the transmitter.
- → Dip Switch Keys #8, #9, #10 = coding of the receiver number ①②③ (refer below for the receiver number).

Door ① = Receiver ① → Button ①

Keys #8 and #10 must be set to ON. Key #9 must be set to OFF.

| | 1 2 3 4 5 6 | | | | | | | | 9 | 10 |
|----------|-------------|------|--|--|--|--|--|--|---|----|
| ON | | | | | | | | | | |
| ↑ | | Must | | | | | | | | |



Door ② = Receiver ② → Button ②

Key #8 must be set to ON. Keys #9 and #10 must be set to OFF.

| | 1 | 2 | 3 | 8 | 9 | 10 |
|----|---|------|-------|---|---|----|
| ON | | | | | | |
| 1 | | Must | matcl | | | |



Door ③ = Receiver ③ → Button ③

Keys #8 and #9 must be set to ON. Key #10 must be set to OFF.

| | 1 | 2 | 3 | 8 | 9 | 10 | |
|----|---|------|-------|---|---|----|--|
| ON | | | | | | | |
| | | Must | matcl | | | | |



> Replacing RADIO016 (2-Door Transmitter) with new RADIOEM903 (3-Door Transmitter):

The DIP SWITCH transmitter has 10 switching keys. With the use of a screwdriver or a pen, place the dip switch keys on RADIOEM903 at the same positions as those found on RADIO016. Use buttons 2 and 2 to operate the 2 doors.

Coding the Receiver (as reference):

- → Dip Switch Keys #1 to #7 and #9 = must be at the same ON / OFF positions as the transmitter.
- → Dip Switch Keys #8 and #10 = coding of the receiver number ①② (refer below for the receiver number).

Door ① = Receiver ① \rightarrow Button ①

Keys #8 and #10 must be set to ON.

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | | | |
|------------|---|------|-------|------|-----------------------------|---|---|---|---|----|--|--|--|
| ON | | | | • | | | | | | | | | |
| \uparrow | | Must | match | with | Must match with transmitter | | | | | | | | |



Door ② = Receiver ② → Button ②

Key #8 must be set to ON. Key #10 must be set to OFF.

| | 1 | 2 | 3 | 8 | 9 | 10 |
|----|---|------|-------|---|---|----|
| ON | | | | | | |
| | | Must | match | | | |






Replacement and Programming Instructions

> Replacing RADIO027 (1-Door Transmitter) with new RADIOEM903 (3-Door Transmitter):

The DIP SWITCH transmitter has 10 switching keys. With the use of a screwdriver or a pen, place the dip switch keys on RADIOEM903 at the same positions as those found on RADIO027. Use button 0 to operate the door.

Coding the Receiver (as reference):

→ Dip Switch Keys #1 to #10 = must be at the same ON / OFF positions as the transmitter.

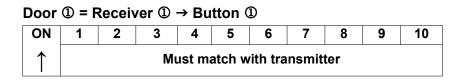



> Pairing RADIOEM903 Transmitter to RADIORE901 Receiver:

- 1. Make sure the dip switch keys inside the RADIOEM903 transmitter are set, refer to the Programming Instructions on p.1.
- 2. Press the **LEARN** button on the RADIORE901 receiver. The **RED LED** will ** **BLINK**. You have 15 sec. to complete the configuration or you will need to restart.
- 3. Press the desired **Button** (① or ② or ③) on the transmitter that you wish to pair to the RADIORE901 receiver.
- 4. The **RED LED** will stop ₹ blinking. The RADIORE901 has now been paired with the transmitter.
- 5. Only one transmitter needs to be matched per receiver. The other transmitters with the same dip switch configuration will pair automatically.

For further information, please consult the operator's Installation & Instruction Manual or contact our Technical Support Department at **1-800-361-2260**.

<u>www.manaras.com</u> 3 TN1040 REV 3 - 2019/04/12



Replacement and Programming Instructions



CALL US FOR MORE INFORMATION: 1-800-361-2260 www.manaras.com



- MEMBER OF THE CANIMEX GROUP -

Reg T.M. of 9141-0720 Québec Inc

www.manaras.com