

Instructions Installation / Programming

DESCRIPTION

COMPONENTS


re-triggered by simply pressing the 🌘 button again. This allows the user to stop or reverse the opener quickly, In operation, the user enters their unique code on the unit's keypad (1 to 6 digits long) and presses the operators. The radio format provides unparalleled security with more than a million different codes This wireless keypad is a wireless radio control designed for use with automatic garage door and gate button to activate the door operator. For up to 30 seconds after the last activation, the keypad can be

a soft blue glow. Press the ${\mathbb Q}$ button at any time to activate the keypad backlight. The keypad has built-in keypad lighting for use at night or in dark areas. The clear silicone keys are backlit with without having to re-enter their code.

The keypad lockout timer will disable the keypad after 10 activations. The keypad must remain idle for 30 To turn the overhead operator light on or off, enter the user code, then press the 🗘 button.

seconds before new attempts.

these "memorized" transmitters. Each keypad code can be considered a different transmitter. Each receiver can to the maximum number can be entered. remember a maximum of 10 transmitter codes. Any combination of portable transmitters and keypad codes up into the receiver's memory. The receiver will retain its memory even without power and will only activate from The receiver is programmed by sending a signal from the user's transmitters that stores the transmitter's code

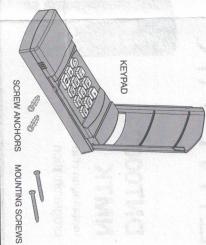

WALL MOUNTING

MOUNT THE KEYPAD IN CLEAR VIEW OF THE DOOR WITH THE TWO SCREWS SUPPLIED

PROGRAMMING OPERATORS

KEYPAD FEATURES

PROTECTS THE KEYPAD HINGED COVER

TEN KEYS ENTERING 1-6 KEYPAD CODES

(1) Refer to the instructions provided with the garage door The opener should BEEP and the LIGHT should BLINK once Press the opener's LEARN BUTTON for 1 second and release opener to set it into "learn" mode.

2) While the RED LED is lit, enter a 1-6 digit code into the keypad The RED LED will remain lit in Learn Mode for 15 seconds

BEEPS and the light BLINKS once Then PRESS and HOLD the keypad's (key until the opener

Repeat Steps 1 & 2 for any additional keypad codes

DELETING A KEYPAD CODE

BUTTON TO TURN THE ENTER USER CODE AND PRESS LIGHT PRESS LIGHT BUTTON TO ACTIVATE SOFT BLUE LIGHTS ILLUMINATE USING NUMBERS OR LETTERS


THE KEYS FOR NIGHTTIME USE.

BUTTON STAYS ACTIVE FOR 30 OVERHEAD OPERATOR LIGHT ON OR OFF

OPENER CAN BE STOPPED OR REVERSED SECONDS AFTER A CODE IS USED SO THE

memory. The RED LED and LIGHT will blink 4 times to show the steps above. The opener will recognize the code and delete it from code was successfully deleted. To delete a keypad code that you no longer want follow the same

9999

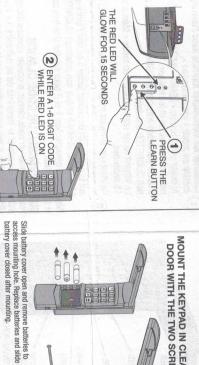

anchors it Use screw

LIMITED WARRANTY

This product is warranted to the original consumer against defects in material and workmanship for the periods mentioned above. Nortex Scurity's Control, LLC will repair, or at its option, replace, any device that it finds requires service under this warranty. This warranty does not apply to damage to the product from negligence, abuse, abnormal usage, misuse, accidents, normal wear or tear or due to failure limitation or exclusion may not apply to you. Any warranties implied by law are limited to the time periods set forth above. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. to follow Seller's instructions, or arising from improper installation, storage or maintenance. In no event will Nortek Security & Control this warranty are exclusive. Some states do not allow the exclusion or limitation of incidental and consequent LLC be responsible for incidental, compensatory, punitive, consequential, indirect, special or other damages. The remedies provided by damages, so the above

proof of purchase should repair be required. warranty service, contact Nortek Security & Control LLC at www.nortekcontrol.com. In order to be protected by this warranty, save your

are some limitations which must be observed MPORTANT: Radio controls provide a reliable communications link and fill an important need in portable wireless signaling. However, there

For U.S. installations only: The radios are required to comply with FCC Rules and Regulations as Part 15 devices. As such, they have

limited transmitter power and therefore limited range A receiver cannot respond to more than one transmitted signal at a time and may be blocked by radio signals that occur on or near their

operating frequencies, regardless of code settings

Changes or modifications to the device may void FCC compliance.

Infrequently used radio links should be tested regularly to protect against undetected interference or fault

A general knowledge of radio and its vagaries should be gained prior to acting as a wholesale distributor or dealer, and these facts should be communicated to the ultimate users

interference that may cause undesired operation of the device. to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including NOTICE: This device complies with part 15 of the FCC rules and with Industry Canada license-exempt RSS standard(s) WARNING: Changes, modifications or adjustments not expressly approved by manufacturer could void the user's authority to operate this equipment. There Are No User Serviceable Parts.

tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation autorisée aux deux conditions suivante reil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter

CHANGING BATTERIES

KEYPAD OPERATION

DOOR OPERATION

2 PRESS

(1) ENTER USER KEYPAD CODE


BUTTON CAN BE PRESSED AGAIN FOR UP TO 30 NOTE: TO STOP OR REVERSE THE OPENER, THE BACKLIGHT ON FOR NIGHTTIME OPERATION NOTE: PRESS (2) BUTTON TO TURN KEYPAD SECONDS WITHOUT RE-ENTERING THE CODE 1 4 5 6 9

OVERHEAD LIGHT OPERATION

(1) ENTER USER KEYPAD CODE

PRESS (1)

NOTE: THE OVERHEAD LIGHT CANNOT BE OPERATED FROM THE KEYPAD UNLESS THE DOOR IS OPEN

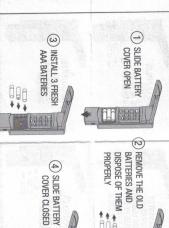

Follow the steps in the diagram and use caution to keep batteries away from children."

Many electronic stores and supermarkets have battery recycling bins. Alkaline batteries can be safely disposed of with normal household waste. Never dispose of batteries in fire because they could explode. Operation requires 3 AAA alkaline batteries. Properly dispose of old batteries